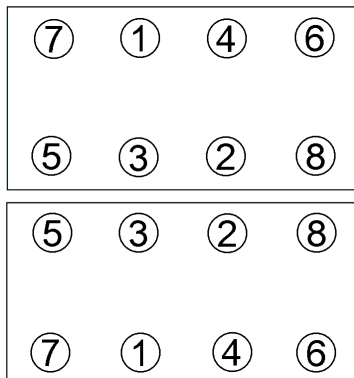


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****735.450**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo130.110
M 12x1,5x159Anziehen/
Tightening/
Serrage/
Apriete 35 Nm
60 Nm
➤ 90°
➤ 90°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 84 mm ÷ 1,2 mm Zyl. 1-3

Mot. CAMA, CAMB, CANA, CANB, CANC, CAND, CARA, CASA,
CASB, CASC, CASD, CATA, CCLA, CCMA, CCWA, CCWB,
CDYA, CDYB, CDYB, CDYC, CEXA, CGKA, CGKB

A4, A5, A6, A8, Q5, Q7, Phaeton, Touareg

Elring-ServiceteamFon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

735.450