

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

563.147

passend für / suitable for
adaptable à / adaptable a


PSA/Fiat




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

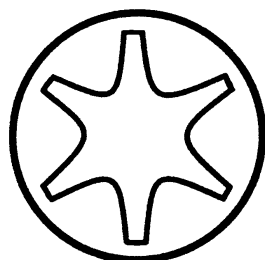

758.280
M 11x1,5x175

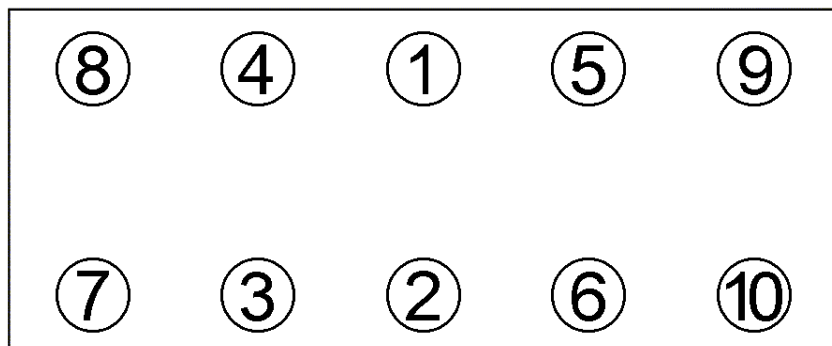

Anziehen/
Tightening/
Serrage/
Apriete

60 Nm
 20 Nm + 300°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 84,5 mm; ÷: 1,27 mm

Mot: XU9S, XU5S, XU5J, XU51C, XU5CP, BAY, BAZ
BDY, XU5M, XU5JP, BFZ, XU9J2, XU9M, LFW,
XU7JP, XU7JB, LFX, LFX

Berlingo, BX, Visa, Xantia, Xsara, ZX, Ulysse, 205,
305, 306, 309, 405, 406, 806, Expert, Partner

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

563.147