

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

776.769

passend für / suitable for
adaptable à / adaptable a





Mercedes-Benz

Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

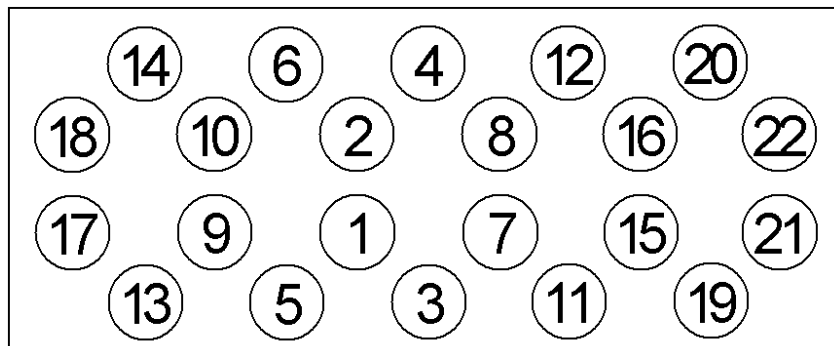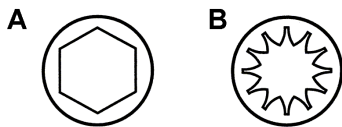

820.210
M 12x104/119/144

Anziehen/
Tightening/
Serrage/
Apriete

M 12 A
70 Nm
90 Nm
10 min
100 Nm

M 12 B
40 Nm
70 Nm
10 min
> 90°
> 90°

M 8
25 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. OM 617.913 1982>

OM 617.910 9/1974>10/1976

OM 617.912 1/1976>

OM 617.931/32

OM 617.950/951/952 1978>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

776.769